

INSTRUCTION MANUAL

MOTION SENSOR

— FIBARO SYSTEM —




Technical support

Should you need any assistance in connecting or configuring your Home Center, please use our guides and technical presentations which can be found on our website:

<http://www.fibaro.com/en/support>

Functional features



Temperature sensor



Accelerometer



Motion sensor



Light sensor

Download FIBARO app for smartphone



Start the device


STEP 1

Open the casing by turning it clockwise.



STEP 2


Take off the casing.

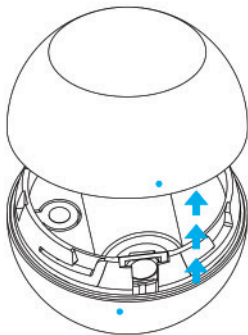

Start the device

STEP 3

Remove the battery blocker
"I'm ready".

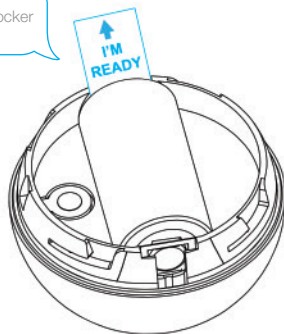

STEP 4

Check if the battery is
placed correctly.

The device will blink red.

Your Motion Sensor is ready to be added to the Home Center.

Motion Sensor must be in range of the Home Center because it requires
a direct communication with the controller.



Start inclusion mode

STEP 5

Start your FIBARO application.
Go to Settings.



Start inclusion mode

STEP 6


Press "add device".



STEP 7

Press "Next".


Inclusion mode has been launched

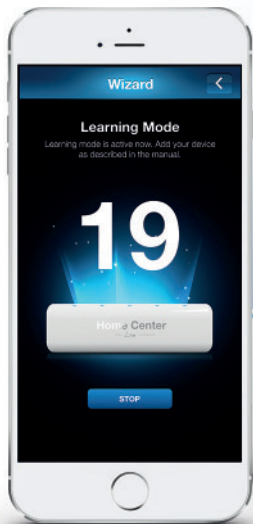

Add your device

STEP 8

Quickly, triple click the button in order to add your device to the system.

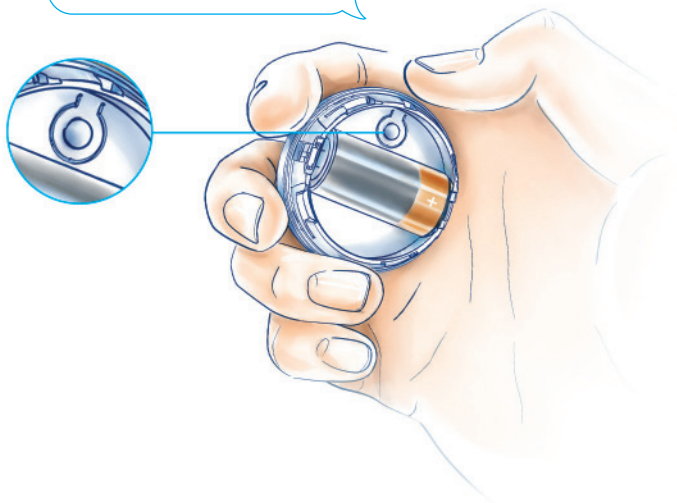


Processing your configurations



Wake up the device




Sometimes waking up the device is not required so it will be omitted automatically.

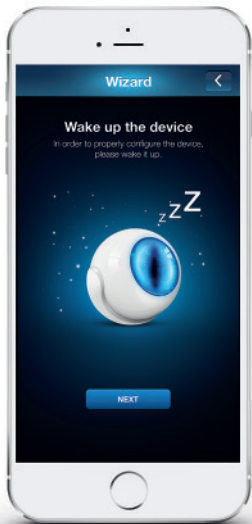

STEP 9

Quickly, triple click the button in order to wake up the device.

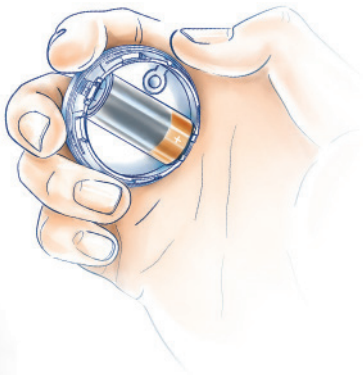

The device has been added



STEP 10

Name the device
and assign it to the room.

Network range test

It is recommended to check if the device's destination is in range of your Home Center.

STEP 11

Hold the button for a few seconds until LED diode blinks violet.

STEP 12

Release the button, and press it again.

The quality of the network range will be indicated by different colours of the LED diode.



Network range test – quality indicator



Direct
communication



Routed
communication




Limited
communication



No signal! The device
will not work correctly!




STEP 13
Press the button in order
to leave testing mode.

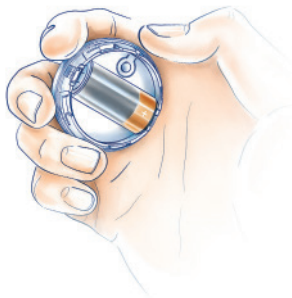

Installation


During the installation it is recommended to wake up the device.

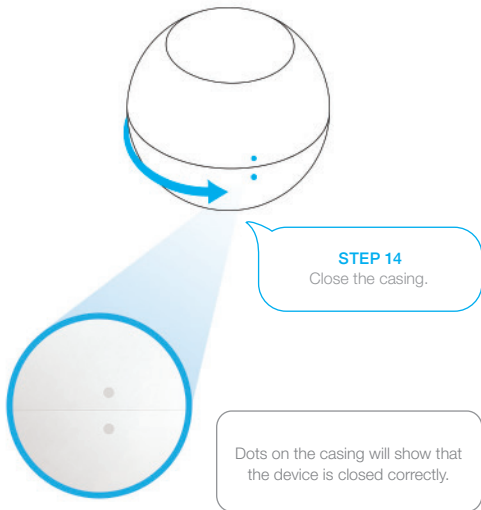

Installation


STEP 15

Install the sensor's holder
in desired location.


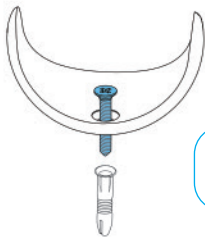


STEP 16

Insert the Motion Sensor
in its holder.

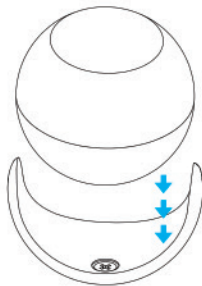


Motion Sensor's range.

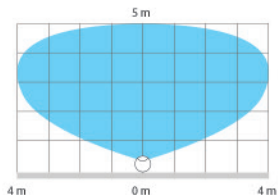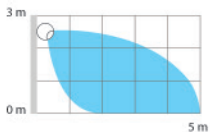

Motion Sensor's light signals

Sabotage alarm


LED will flash in alarm mode (red-blue-white colours).

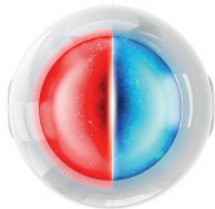

21° C

17° C

29° C

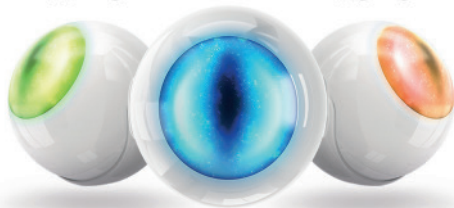

Motion

Everytime the movement is detected, Motion Sensor will glow in different colour depending on the temperature and user's configurations.



www.fibaro.com